

AquaMetrix 1" Differential Style pH Sensor PTXR5 -015



Description

The new and improved one-inch PTX sensor is the latest addition to the legendary AquaMetrix differential sensor family. Our smart sensors maintain their robust design, but leverage the analytical power of our controllers, fully integrated. The 1" TX version also comes in distinctive blue PPS (Ryton[®]) for superior resistance to chemical and mechanical weathering.

The advantages of digital output sensors are compelling. They include reduced noise, higher immunity from stray voltages, calibration stored in the sensor, and the elimination of intermediary transmitters.

The new TX-series incorporates all the benefits of differential measurement found in other models of the 60 and 65 series, field-proven in thousands of installations.

The replaceable salt bridge has been completely redesigned for this series - no special tools are required! Simply grab a #3 Philips screwdriver or 1/2" wrench and rejuvenate your sensor in seconds.

The improved, universal flat-faced glass process electrode is specially designed for tough applications. A larger surface area guarantees quick readings and outstanding performance, and a self-cleaning flush fit when installed inline ensures upkeep will be minimal. The process electrode is encased in a protective layer of PPS offering increased resistance to physical damage.

Aquametrix pH sensors are designed to simply and reliably ensure water quality compliance. Aquametrix pH sensors provide accurate measurements under conditions that often render conventional pH sensors inoperable.

Differential measurement technology uses two glass electrodes to make the measurement differentially with respect to a third metal electrode. The resulting true differential measurement has several advantages over conventional sensors: ground loop problems are virtually eliminated and the sensor can be restored to factory condition at modest cost by replacing the salt bridge and reference solution.

The Automatic temperature compensation is improved through the use of a thermistor at the tip of the probe. providing rapid response for process temperature variations.

The sensor is compatible with any offthe-shelf 1" NPT fittings and serves as a drop-in replacement in fittings designed for the previous iteration.

You no longer need to sacrifice precision for longevity with Aquametrix TX Sensors

Features

- Low cost of ownership
- Stable and Repeatable performance
- Flat face electrode is standard
- Industrial Grade Quality
- Chemically resistant PPS body
- Universal style: flowthrough and submersion
- Analog (4-20 mA) or Digital (RS485) Output
- Automatic Temperature Compensation
- Replaceable Salt Bridge
- Quick Ship Available

Applications

- Process Control
- Industrial and Municipal Waste
 Treatment and Neutralization
- Fume Scrubbers
- Plating
- Circuit Board Manufacturing
- Mining
- Power Generation
- Food and Beverage
- Aquaculture
- Agriculture

Smart Inside. Tough Outside.



100 School Street Andover, MA 01810 978-749-9949 Toll free 855-pH Probe (855-747-7623) www.WaterAnalytics.net


N110-148 R2

PTXR5 pH Differential Smart Sensor

Technical Data

Measuring Range	0 to 13 pH	Stability	0.03 pH per day, non-cumulative	
Wetted Materials	Ryton® (PPS), Ceramic, Glass, Viton®, Titanium, *PVC (cable jacket), *San- toprene® 101-55 (strain relief)	Sensitivity	0.01 pH unit	
		Accuracy	± 0.03 pH	
	*when fully submerged	Sensor Cable	Default length 15 ft (4.5m) 2-wire Analog	
Temperature Limits	23 to 167°F (-5 to 75°C) at amospheric pressure			
Maximum Pressure	100 psig at 150°F (65°C)		2-wire RS485 1-wire ground	
Maximum Flow Rate	10 ft. (3 meters) per second			
Temperature Compensation	Automatic			

Dimensior

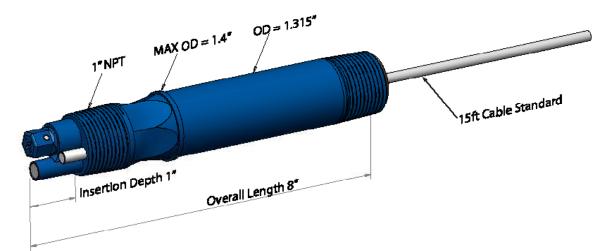

Related Products

ANALYZERS

AM-2300 Multi-Input Controller

ACCESORIES

ACCESONES	
AM-SBK3-R5	Salt bridge kit (3 pack) for R5 sensor
AM-SBK10-R5	Salt bridge kit (10 pack) for R5 sensor
AM-CFT-R5	1.5" compression fitting for R5 sensor
AM-TEE-5	2" Union TEE with quick disconnect adapter
AM-ARM-5	Submersion Arm
AM-PTR-5	Electrode Protector
AM-JET-5	Jet Cleaner
AM-SFL-5	2" Sanitary Flange
AM-JB2	NEMA 4X Junction Box
AM-CBL	Universal Extension Cable

Ordering Information

PTXR5-015	Smart Analog output (4-20mA) or Digital (RS485) industrial differential pH sensor for flow-through or submersion application. Compatible with AM-2300 and any PLC with 4-20mA input. Standard 15 ft cable.

CALIBRATION SOLUTIONS

AM-PH4-1P	pH 4 Buffer, 1 pint (500 mL)
AM-PH7-1P	pH 7 Buffer, 1 pint (500 mL)
AM-PH10-1P	pH 10 Buffer, 1 pint (500 mL)